



stylies.

OF SWITZERLAND

CETUS - AIR COOLER

 


 
Gebrauchsanweisung Deutsch	2
Instruction Manual English	10
Mode d'emploi Français	18
Istruzioni d'uso Italiano	26
Instrucciones de uso Español	34
Gebruiksaanwijzing Nederlands	42
Käyttöopas Suomi	50
Brugsanvisning Dansk	58
Návod k obsluze Český	66
Návod na obsluhu Slovenčina	74
Instrukcja obsługi Polski	82

stylies.

OF SWITZERLAND

CETUS - AIR COOLER - LUFTKÜHLER

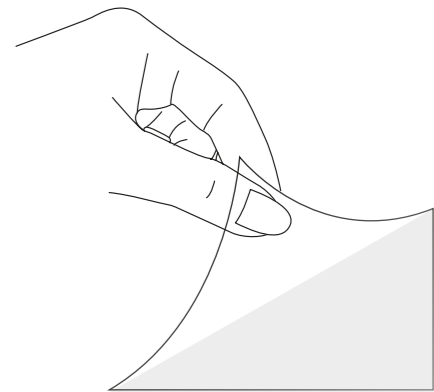

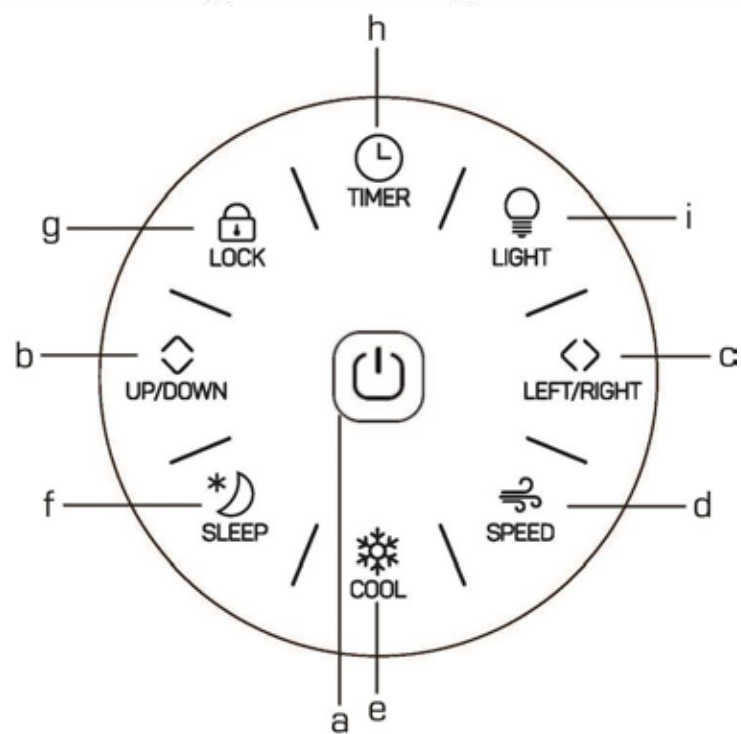

Instruction manual – English

Congratulations! You have just become the owner of the extraordinary Stylies CETUS air cooler with State-of-the-Art technology. It will bring you a lot of pleasure when using it and it will improve the air quality of your rooms.

As for all electrical household devices, special caution is required when using this fan in order to avoid injuries, fire and damages to the device itself. Before you use it for the first time, please read through this instruction manual carefully and pay attention to the safety guidelines and instructions printed on the device.

IMPORTANT SAFETY GUIDELINES

1. This appliance can be used by children aged from 8 years and above and persons with reduced physical, sensory or mental capabilities or lack of experience and knowledge if they have been given supervision or instruction concerning use of the appliance in a safe way and understand the hazards involved.
2. Children shall not play with the appliance.
3. Cleaning and user maintenance shall not be made by children without supervision.
4. If the supply cord is damaged, it must be replaced by the manufacturer, its service agent or similarly qualified persons in order to avoid a hazard.
5. Unplug the appliance during filling and cleaning.
6. Before inserting the plug into the mains socket, please check that the voltage and frequency comply with the specifications on the rating label.
7. Disconnect the mains plug from the socket when the appliance is not in use and before cleaning.
8. Ensure that the mains cable is not hung over sharp edges and keep it away from hot objects and open flames.
9. Do not immerse the appliance or the mains plug in water or other liquids. There is danger to life due to electric shock!
10. To remove the plug from the plug socket, pull the plug. Do not

pull the power cord.

11. Do not touch the appliance if it falls into water. Remove the plug from its socket, turn off the appliance and send it to an authorized service center for repair.
12. Do not plug or unplug the appliance from the electrical outlet with a wet hand.
13. Never attempt to open the housing of the appliance, or to repair the appliance yourself. This could cause electric shock.
14. Never leave the appliance unattended during use.
15. This appliance is not designed for commercial use.
16. Do not use the appliance for other than intended use.
17. Do not wind the cord around the appliance and do not bend it.
18. Never insert fingers, pencils or any other object through the holes of the plastic shell.

PARTS DESCRIPTION

The device consists of the following main components (please see inside cover):

 
1. Control panel
 2. LED screen
 3. Air outlet
 4. Water level window
 5. Front wheels with brake
 6. Rear wheels
 7. Water tank
 8. Filter
 9. Filtration mesh cover
 10. Filtration mesh
 11. Power cord hanger
 12. Remote control storage
- a. ON/OFF button
 - b. Air vertical adjustment button
 - c. Air horizontal adjustment button
 - d. Speed selection button
 - e. Cooling button
 - f. Sleep mode button
 - g. Child safety lock button
 - h. Timer setting button
 - i. Power saving mode button

 







 

BEFORE USE

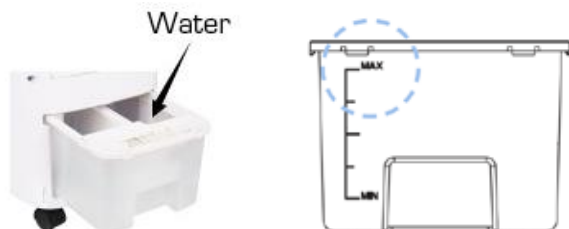1. Pull the appliance out from the carton and place it on a solid heat-resistant horizontal surface.
2. Check if the accessories are complete including: one remote control, two ice packs, two wheels with brake and two wheels without brake.
3. Insert four wheels into the corner holes and ensure the wheels are assembled tightly. Make sure the two wheels with brake are assembled at the front side of the appliance. (If you need to lock the wheels, just press down the brake lever.)

HOW TO USE

1. Pull out the water tank and add water into the water tank. If you need the air sent out much cooler, put the ice pack (first frozen for 6 hours) into the water. Make sure the water level is between the MIN and MAX line marked on the water tank.



2. Plug the appliance into the appropriate power outlet. A beep sound sent out indicates the power is connected.
3. Turn on the appliance by pressing the ON/OFF button in the center of the control panel. The current environmental temperature is shown on the screen and will be changed as the appliance works.
4. Choose and set below functions as you want.
 - **Air flow speed selection:**
Press the speed selection button to choose air flow speed, The logo "" indicating speed selection and the corresponding speed level logo will be shown on the screen: LOW (logo "") → MEDIUM (logo "") → HIGH (logo "") → LOW (logo "")... in turn.
 - **Air flow direction:**
Press the air vertical adjustment button to make the louver swing up and down; press it again to fix the the louver at a specific angle. The logo "" is shown on the screen when the louver swings.
Press the air horizontal adjustment button to make the air swing left and right and the logo "" is shown on the screen; press it again to cancel the swing.
 - **Cooling:**
Press the cooling button to start the cooling function. The logo "" will be shown on the screen. Press again the button to cancel the function.
 - **Sleep mode:**
Press the sleep mode button, then the appliance works as per the preset computer program, alternating among different fan speeds. The logo "" will be shown on the screen. To exit from this mode, press the button again.
 - **Child safety lock:**
Long press the child safety lock button, the appliance setting will be locked and the logo "" will appear on the screen, but the ON/OFF button can still be pressed to directly turn off the appliance. Long press the child safety lock button again, this mode can be exited.
 - **Timer Setting:**
Press the timer setting button to start the timer setting, you can set the appliance to automatically turn itself off in 0.5 hour /1 hour /1.5 hours/ 2 hours/.../7.5 hours /8 hours. One press to the button increases 0.5 hour, the maximum setting is 8 hours. When the digital display shows 8 hours, press again the timer setting button, the timer will be canceled.
 - **Power saving mode:**
Press the power saving mode button to turn off the LED display except for the speed logo.

Press this button again or any other button once (child safety lock button needs long press), the LED display will be lighted up.

NOTES:

1. It is recommended to change water and clean water tank frequently.
2. If there's not enough water in the water tank, the cooling function cannot be activated. When you press the cooling button, three beep sounds will be sent out for water shortage reminder, and the logo “❄️” flickers on the screen.
3. The appliance has memory function that can allow the appliance to run in the setting made last time, but if the power is off, the memory will be cleared when the appliance has been restarted.

REMOTE CONTROL

This unit has a remote control. Please use one piece of CR2032 battery for this remote control. Please insert the battery to the remote control tightly (Refer to the instruction behind the remote control). If it is not in use for a long time, please take the battery out of the remote control. The functions of the remote control buttons are the same as the functions of the buttons on the control panel. You can store the remote control in the small slot of the handle.

 
CLEANING AND MAINTENANCE

Unplug the appliance during filling and cleaning.

Make sure there is no water on the control panel.

- **Clean the filtration mesh**

1. Unplug the appliance.
2. Pull the filtration mesh cover outwards. (see the picture below)
3. Rinse the filtration mesh under water to wash away the dust.
4. Put back the filtration mesh in place after cleaning.

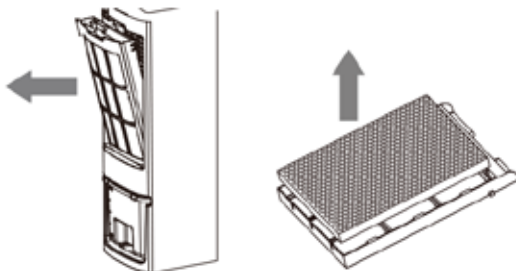

Note: After long time operation, the filtration mesh becomes clogged with dust and dirt, which will greatly affect the performance of the appliance. It is recommended to clean the filtration mesh frequently.

- **Clean the water tank**

1. Unplug the appliance.
2. Pull out the water tank.
3. Take out the filter and rinse it under water.
4. Clean the water tank with a soft cloth and a little mild detergent, then rinse it in water.
5. Put back the filter and the water tank in place after cleaning.

Note: After some time operation, the water tank may have dust and dirt. It is recommended to change water and clean the water tank frequently.

- **Clean the main body**



1. Unplug the appliance.
2. For slight dirt, wipe it off with a soft damp cloth. For greasy dirt, squeeze a little mild detergent on a soft damp cloth, then wipe the dirt off.
3. Let the main body dry completely before next use.

TECHNICAL DATA

Mains voltage:	220-240V ~ 50Hz
Power consumption:	65W
Airflow:	600 m ³ /h
Water tank capacity:	6 litres
Dimensions / Net weight:	W 297 x D 303 x H 797 mm / 6.7 kg
EU compliance:	CE / WEEE / RoHS

Technical changes and errors reserved.

REPAIRS / DISPOSAL

- Repairs to all electric devices (including replacement of the power cable) may only be performed by authorised experts. Carrying out inappropriate repairs voids the warranty and no liability shall be accepted.
- If the power cable has become damaged, it must be replaced by the manufacturer, an official service partner or a qualified person in order for further damage to be avoided.
- Never operate the device if the cable or the plug is damaged, if the device has malfunctioned or if the device has been dropped or damaged in any other way (i.e. with cracks or breakages to the casing).
- Do not use any sharp, abrasive objects or corrosive chemicals.
- Any old devices must be immediately rendered unusable (unplug power cable) and taken to the appropriate waste collection point.
-  This device must not be disposed of with household refuse. Please dispose of this device at the appropriate waste collection centre. Collecting and recycling electrical and  electronic waste saves valuable resources.
- The packaging material is recyclable. Dispose of the packaging in an environmentally friendly way and ensure that it is taken to a collection centre for recyclable materials.
- If electrical devices are disposed of in an unregulated way, the effects of weathering can cause hazardous substances to contaminate the groundwater and the food-chain or can result in a burden on flora and fauna for years to come.



BATTERY MUST BE RECYCLED OR DISPOSED OF PROPERLY. DO NOT

OPEN. DO NOT DISPOSE OR IN FIRE OR SHORT CIRCUIT.

TWO-YEAR WARRANTY

For the warranty period of 2 years after the purchase of the appliance, we will repair or replace with a refurbished product (at our option), without any cost to you for either the parts or labor, any machine or part that proves to be defective in materials or workmanship.

EXCEPT FOR THE WARRANTY PROVIDED ABOVE, Coplax DISCLAIMS ANY AND ALL OTHER IMPLIED WARRANTIES AND ANY WARRANTY OF MERCHANTABILITY OR FITNESS FOR A PARTICULAR PURPOSE WITH RESPECT TO THE PRODUCT FOR ANY PERIOD AFTER THE EXPIRATION. Coplax will, at its sole discretion, repair or exchange a product under warranty. NO credit will be issued. The remedies described above are your sole remedies in the event of any breach of the warranty provided above.

Who is covered:

The original owner of a privately-owned Coplax appliance who can provide a dated proof of purchase in the form of an invoice or receipt is covered. The warranty is not transferable. The original dated proof of purchase (a copy needs to be faxed, e-mailed, mailed) prior to returning the unit. Provide the model number of your appliance and a detailed description (preferably typed) of the problem with the item. Enclose your description in an envelope and tape it directly to the appliance before the box is sealed. Do not write anything on or alter in any way the original box.

What this warranty does not cover:

Parts that normally require replacement, such as demineralization cartridges, «Clean Cube», active carbon filters, water wick filters and any other consumable item that needs regular replacement except for material or workmanship defects.

- Damage, failure, loss or deterioration due to ordinary wear and tear from abuse, misuse, negligence, accident, faulty installation, placement and operation, improper maintenance, unauthorized repair, exposure to unreasonable temperatures or conditions. This includes damages caused by misusing essential oils or water treatment and cleaning solutions.
- Damage resulting from inadequate packaging or carrier mishandling of returned products.
- Misplacement or loss of accessories such as nozzle, fragrance capsule, water tank cap etc.
- Shipping and transportation costs to and from any place of repair.
- Direct, indirect special or consequential damages of any type, including loss of profits or other economic loss.
- Transportation damage of a unit shipped from one of our retailers. Please contact them directly.

This Warranty does not cover damages or defects caused by or resulting from failure to conform strictly to Coplax's specifications in connection with the installation, operation, use, maintenance, or repair of the Coplax appliance.