

Dryfix DUO 2 in 1 shoe & clothes dryer



Dryfix

PLEASE READ THESE INSTRUCTIONS CAREFULLY BEFORE USING THE APPLIANCE !


Important safety instructions:

- Supervise children when they are near the appliance.
- Pay attention to the electricity, never reach into the appliance with objects or insert them.
- Do not place any objects on the dryer.
- Do not block the outlet area of the appliance and please ensure that there is sufficient space/clearance around the fan.
- Ensure that there is sufficient air supply to the appliance, otherwise this can lead to a reduction in performance and, in the worst case, to overheating and/or fire.
- Only qualified personnel or electricians are permitted to open the appliance.
- Make sure that no moisture reaches the electrical system of the appliance.
- Only use the recommended voltage for operating the appliance.
- Make sure that the power cable is unfolded (untied) before connecting it to the socket.
- Before using the appliance, make sure that the plug is clean and properly connected to the socket.
- socket is connected.
- Never touch the plug or socket with wet hands
- Please do not use multiple sockets to operate the dryer.

Do not repair defective or damaged cables on the appliance yourself, as you could suffer a serious electric shock.
get !

- This appliance is not intended for use by persons (including children) with reduced physical, sensory or mental capabilities, or lack of knowledge, unless they have been given supervision or instruction concerning use of the appliance by a person responsible for their safety.
- Ensure that highly flammable substances (e.g. gases/oils etc.) are never in the vicinity of the appliance.
- Please switch off the appliance immediately and disconnect it from the power supply/grid if something appears to be wrong. In this case, please contact a specialist and do not attempt to repair the appliance yourself.

Explanation of the device parts:

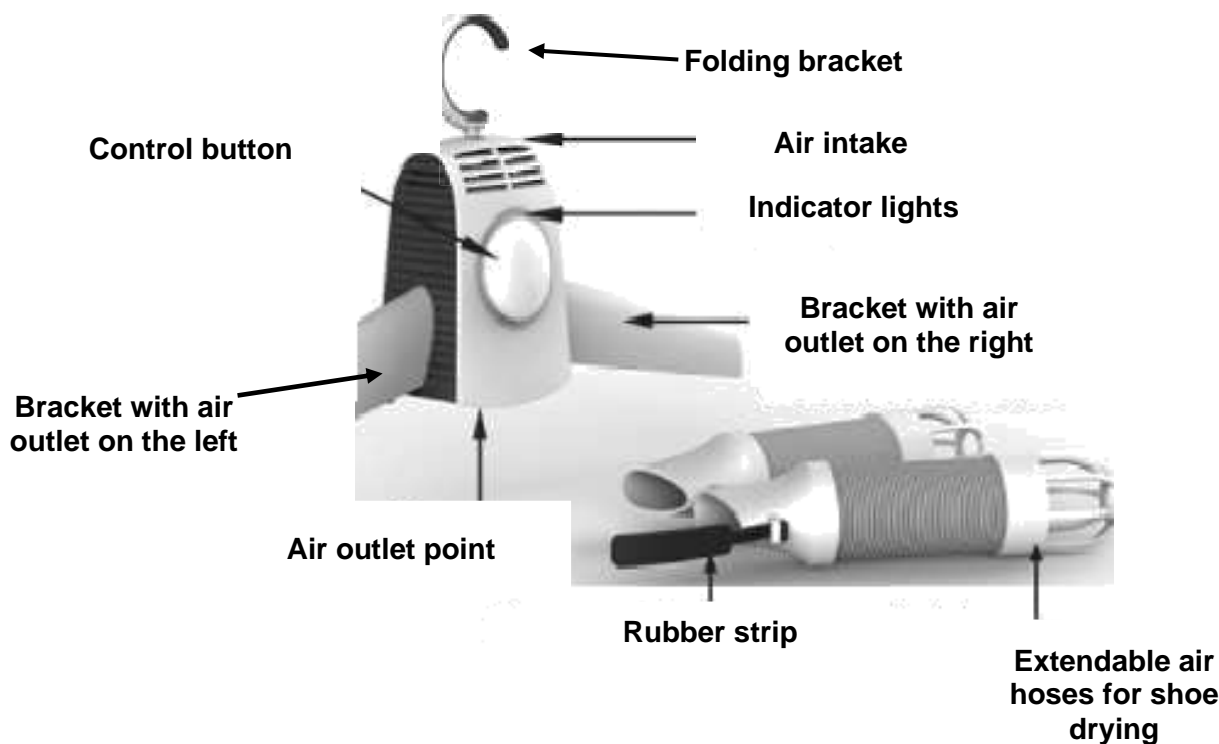

Assembly:



Shoe dryer: One extendable tube can be attached to each side of the support. Close the lower air outlet with the rubber strip to direct the entire air volume into the tubes.

Clothes dryer: A hanger can be placed on each side of the supports

Operating instructions:

Unpack the device.

The scope of delivery includes the drying element itself as well as 2 straight drying rods (for drying clothes) and 2 elastic hoses (for drying shoes).

Place the attachments on both sides of the drying element depending on the desired application.

Clothes drying:

Now hang the desired garment on the hanger and hang it up. Close any zippers or buttons completely and make sure that the air inlet between the hanger and the control button remains free.

The clothes pegs included in the scope of delivery can be used to hang smaller items of clothing such as underwear or socks under the air outlet area. The hanger can be hung with a maximum of 5 kg of laundry.

Shoe drying:

Insert the hoses as far as possible into the shoes to be dried. There are spacers at the end of the hoses to ensure good air flow. The dryer has three air outlet points, one each on the left and right and one at the bottom. When used as a shoe dryer, this must be closed with the rubber strip located on one of the two hoses in order to direct the entire air volume into the hoses.

Now insert the plug into the socket. The appliance is now in stand-by mode and the blue light flashes. Drying is started by pressing the round operator button within the light circle.

The light changes from blue to red and warm air flows out. A quiet operating noise from the fan can be heard. If the button is pressed again, the heating switches off and cold air flows out.

In warm air mode, warm air is now blown out until the process is ended by pressing the button again. If the process is not ended manually, warm air is blown out for 3 hours, followed by cold air for 5 hours. The dryer then switches off automatically and returns to standby mode.

Do not use the dryer in cupboards or other confined spaces, as the air may heat up so much that the dryer's overheating protection will interrupt the process.

Cleaning and maintenance:

Always disconnect the mains plug before cleaning. Always clean the grille if dirt in the air intake or outlet area is restricting the air flow. Use a soft, slightly damp cloth for this purpose.

Do not use strong cleaning agents to avoid damaging the housing. Ironing arms and air hoses can also be washed under running water.

Further information:

The dryer is intended for drying light clothes such as shirts, T-shirts, baby clothes, underwear, pullovers and shoes. Do not use it for other drying tasks, e.g. as a hair dryer, room heater, etc. and do not use it for excessively large or heavy items of clothing.

Before using the appliance for the first time or if it has been out of operation for a long time, let it run for approx. 10 minutes by pressing the round operator button. This serves to blow out any residual moisture in the appliance.

When you are not using the device, please store it in a dry place protected from the sun.

If water accidentally gets into the dryer, disconnect the mains plug immediately. Remove the hangers or hoses and tilt the dryer back and forth to allow any water to run out of the appliance. Allow it to dry out completely for at least 24 hours before putting it back into operation.

Technical data:

Model designation:	Dryfix DUO
Overheating protection:	Yes
Noise development:	Approx. 47 dB/A
Operating voltage:	220-240V ~ 50Hz
Max. Power consumption:	150 W (0.7 A)
Operating setting:	Pressure switch
Application range:	0°C to 35°C
Dimensions as coat hanger (H/W/D):	125 x 420 x 70 mm
Dimensions of the product (H/W/D):	125 x 80 x 70 mm
Hose length:	24 - 42 cm
Weight:	505 g
Scope of delivery:	Dryfix DUO, 1x hook, 2x fan hose, 2x support arms, transport bag, operating instructions, mains cable

Correct disposal of this product



Within the EU, this symbol indicates that this product must not be disposed of with household waste. Old appliances contain valuable recyclable materials that should be recycled. In addition, the environment and human health should not be polluted by uncontrolled waste disposal. Therefore, please dispose of old appliances via suitable collection systems or send the appliance to the place where you purchased it for disposal. They will then recycle the appliance.

■
We hope you enjoy using this device

Your Aktobis AG

Keep these instructions for use in a safe place !

